

MAGENTA: Acceso per 1 ms per ogni trasmissione al Gateway o Ripetitore

MAGENTA: Lit for 1ms for each transmission to the Gateway or Repeater

RED and MAGENTA: RED flashes twice and MAGENTA twice - after this sequence, the cell is off



color's LED modes on the Gateway	EN
N during transmission to the cell	
DN when receiving from the cell	
(low battery)	
IG YELLOW (battery charging)	
ON (battery full)	
(AC disconnected, battery or USB operation)	
color's LED modes on the Beneater	
N during transmission to the Gateway	
N during transmission to the cell	
N when receiving from the cell	
(low battery)	
NG YELLOW (battery charging)	
/ ON (battery full)	
(AC disconnected - battery operation)	
M PC TO PC	
Control software on a new PC	
ich the pairing with the cells was made search and compress the folder "flexa 22	16"
with all the subfolders into a .zip file	,
flexa_2.2.16.zip" folder	
'flexa_2.2.16.zip" folder on the new PC	
a Control Software on new Pc	
colori nei modi LED sul Gateway	IT
durante la trasmissione verso la cella	لكون
eso durante la ricezione dalla cella	
tteria scarica)	
npeggiante (batteria in carica)	
eso (batteria carica)	
ceso (AC disconnessa, funzionamento con Batteria o USB)	
eso (AC connessa)	
lori naj modi I ED sul Panastar	
adrante la trasmissione verso il Gateway	
a durante la trasmissione verso la cella	
eso durante la ricezione dalla cella	
tteria scarica)	
npeggiante (batteria in carica)	
io (batteria carica)	
disconnessa, funzionamento con Batteria)	
connessa)	
TO DA PC A PC	
ra Elova Control su un nuovo DC	
ato effettuato il pairing con le celle cerca e comprimi la cartella "fleva 2216", ove	rsione
tte le sottocartelle e i file al suo interno in un file .zip	ISIONE
tera cartella "flexa_2.2.16.zip".	
rtella "flexa_2.2.16.zip" sul nuovo PC	
re Flexa Control sul nuovo PC	
	EN
	EN
n only after the Gateway has completed the cell pairing phase (see First Connection). It vary according to the state of the load (see below).	
eater is automatic as soon as the cell sends the signal (within the times provided by the algorit	.hm).
VAY CONFIGURATION, choose the Mode: Gateway and Repeater option.	
nnect to Repeater (See User Manual)	
 rvals change according to load variations. An intelligent sending algorithm adjust	s
tenval is Learand	
nterval is 10 seconds	
nterval is 60 seconds	
val is 10 minutes	
	17
Il Gateway ha completato la fase di abbinamento con le celle (vedi Prima connessione).	
ene automaticamente non appena la cella invia il segnale (entro i tempi previsti dall'algoritm	10).
IEWAY CONFIGURATION, scegliere l'opzione Mode: Gateway and Repeater.	
celle di carico si colleghino al Repeater (vedere Manuale d'uso)	
i intervalli di trasmissione cambiano in accordo alle variazioni del carico. Un algori	tmo
re gli invii quando il carico risulta stabile per:	-
ismissione è di 10 secondi	
nissione è di 60 secondi	
one e a lo minuti I ettagli	
-	